

VL-MV72AZ


**Panasonic**



User Guide



1.1 Main Monitor / Extension Monitor

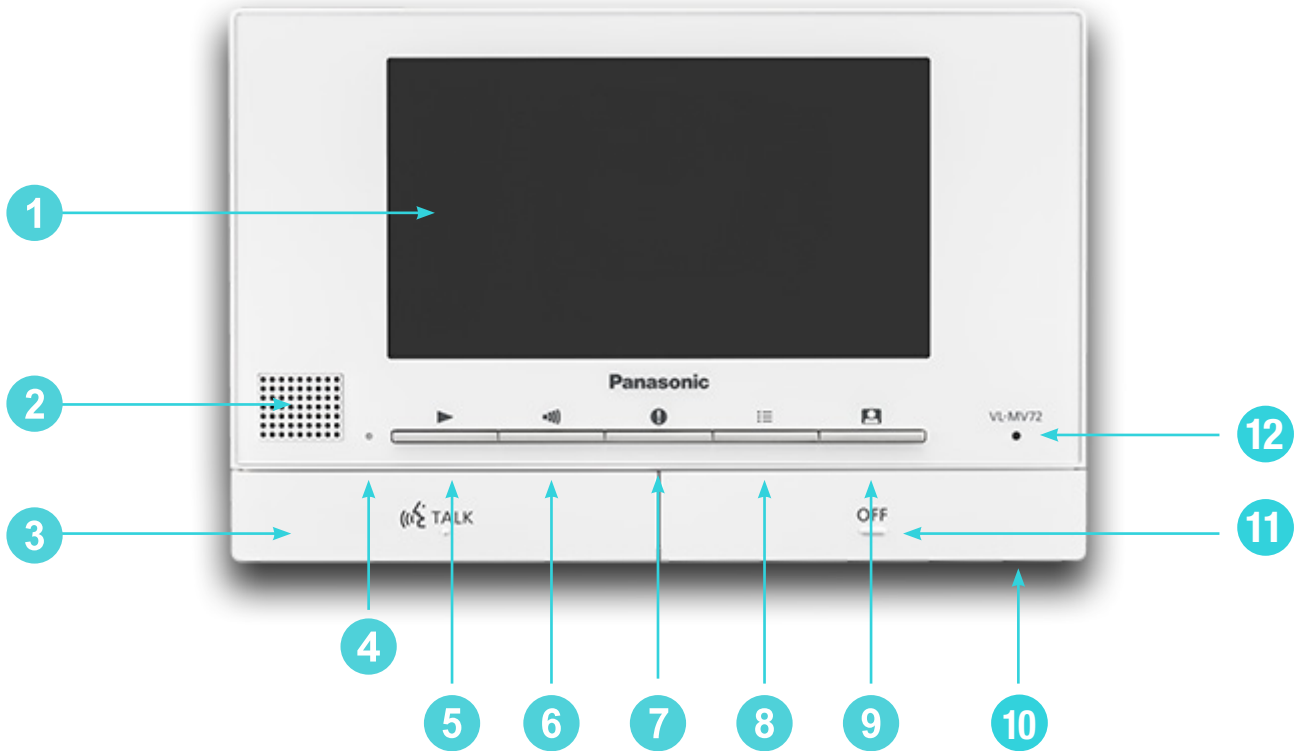


- 1 Display
- 2 Speaker
- 3 Play Lamp (blue)
- 4 **TALK** Button
- 5 **PLAY** Button
- 6 **PAGE** Button
- 7 **INFORMATION** Button
- 8 **MENU** Button
- 9 **MONITOR** Button
- 10 Microphone
- 11 **OFF** Button
- 12 **RESET** Button

Press to page extension monitor when the main monitor is idle or transfer calls.

If the main monitor cannot be correctly operated, press the RESET button with a pointed object to reset the main monitor. (Recorded images and configurations are not affected.)

## 1.2 Soft Keys

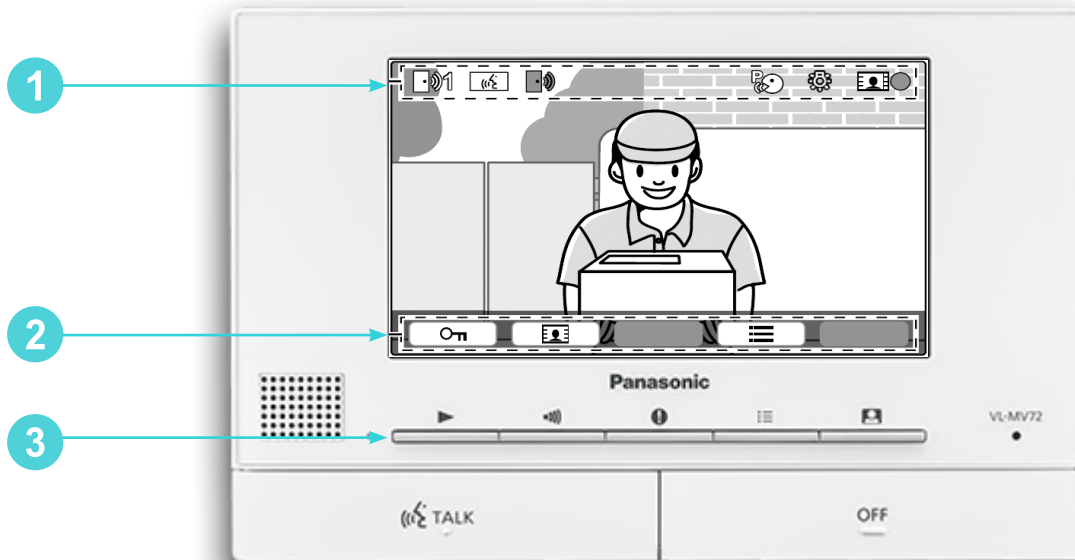

1 Status Icons

2 Soft Key Icons

3 Soft Key

Icons indicate the functions that can be operated by the soft keys

### Status Icons (Main monitor)



Indicates which doorphone is calling, monitor, or on a call.



Indicates there is call from the doorphone when monitoring or on a call with another device.



Indicates that the main monitor is on a call.



Indicates that a doorphone and a PBX extension are talking.



Indicates that the main monitor is monitoring.



Indicates that images are being recorded.



Indicates that the doorphone's LED lights are on.



Indicates that **“Press-To-Talk”** mode is on.

## 2.0 Basic Operations

### 2.1 Answering doorphone calls and to Unlock the doors.

#### To ANSWER the call

Press **"TALK"** button.

- Speak within about 50 cm of the microphone.
- Speak alternatively with the visitor. If you and the visitor speak at the same time, you will not hear each other.
- You can talk for up to about 90 seconds.

#### To UNLOCK the door

Press **"KEY"** button.

- If there are 2 doors, available select the door to be unlocked then Press **"OK"**, then press **"KEY"** button to unlock the door.

#### To END the call

Press **"OFF"** button

### 2.2 Talking with other devices

#### To MAKE a call

Press **"Page"** button.

- If there are multiple devices, select the device to page, then press **"OK"**.
- To page all devices, select **"Call all together"** then press **"OK"**.

When finished, press **"OFF"** button.

### 2.3 Monitoring

Press **"Monitoring"** button

- If there are multiple doorphones, select desired doorphone then Press **"OK"**
- The images from the doorphone are displayed.
- You can talk to the monitored party by pressing **"TALK"**.

When finished, press **"OFF"** button.

### 2.4 Recording manually

While monitoring, press **"Monitoring"** button.

- The main and extension monitor can manually record 8 images.

### 2.5 Playing recorded images

Press **"Play"** button.

- **"Recorded image list"** screen is displayed.

Select **"Unplayed images"** or **"Played images"** to play, then press **"OK"**

Browse the image sets and images.

- Play icon to Plays all image set continuously.
- Revers icon to browses image, from older to newer.
- Forward icon to browses image, from newer to older.
- Menu button to displays the options menu.
- Return icon to returns to the previous screen.
- Pause icon to pauses continuous playback.
- Play back icon to plays the previous image.
- Play next icon to plays the next image.

When finished, press **"OFF"** button.